


NOTE:

1. THE AIR RELEASE VALVES SHALL BE PLACED AT THE HIGHEST POINT ON THE SUPPLY AND RETURN LINE FOR EACH ZONE.
2. EACH ZONE TO HAVE TWO AIR RELEASE VALVES. RETURN LINES TO BE CONNECTED A COMMON RETURN LINE.

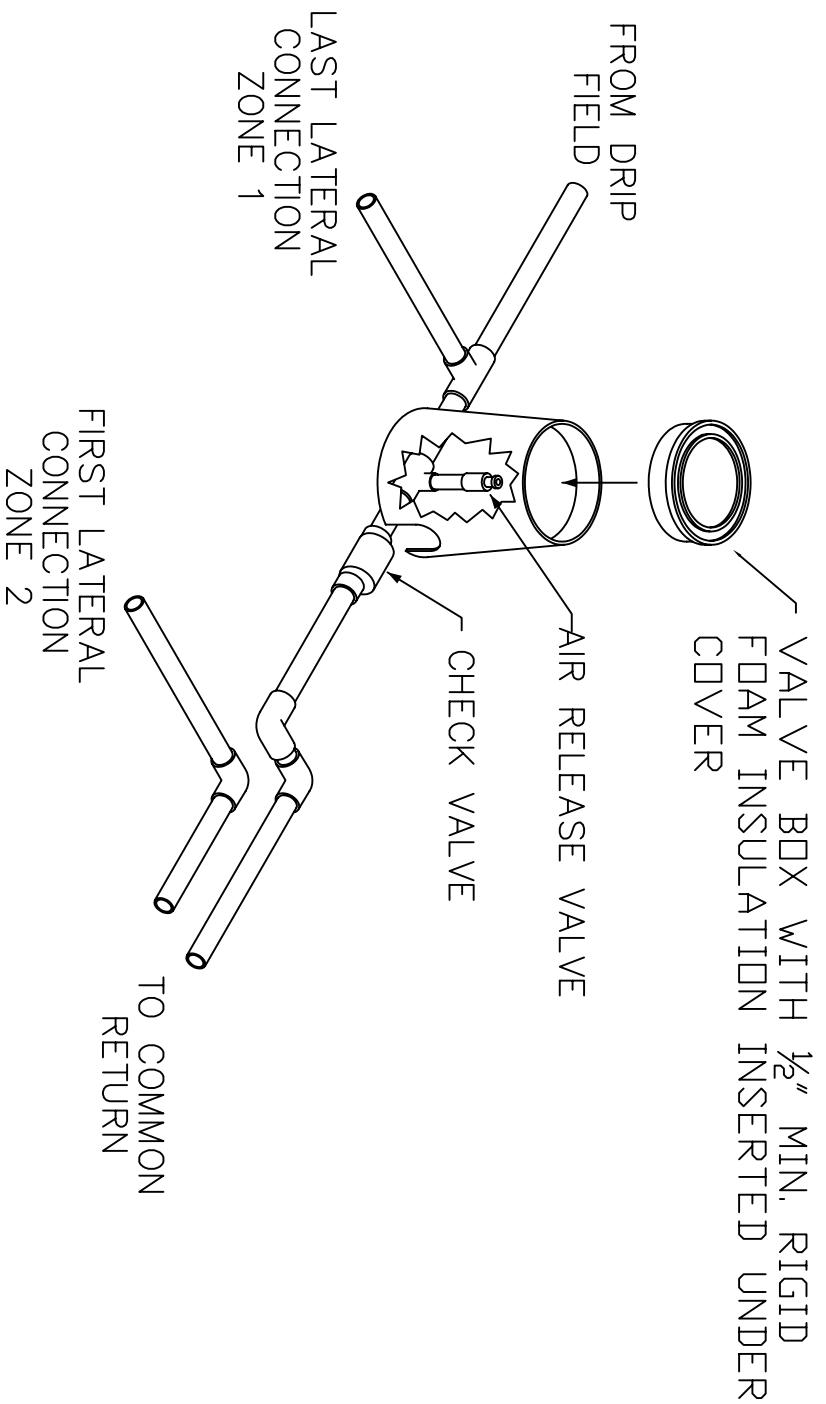

AIR RELEASE & CHECK VALVE DETAIL